


OSLO COLLECTION


DOUBLE ROBE HOOK 144136

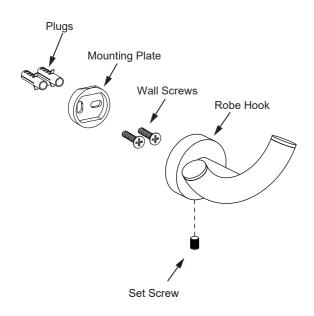

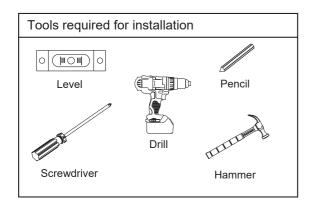


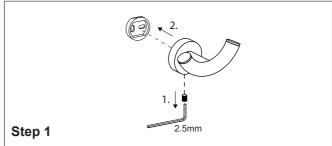


Loosen the set screw on the accessory and remove the backing plate. Position the accessory against the wall and mark outline with pencil.

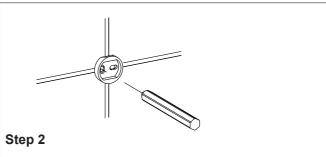

Position the backing plate flat side down on the wall and mark holes with pencil.

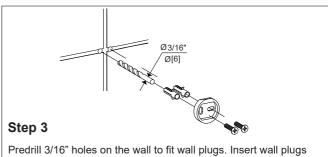

into the wall. Position backing plate flat side down over the plugs and install screws.

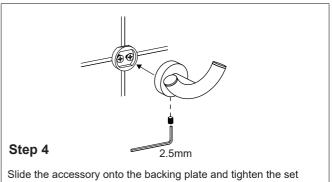

screw using Allen key provided.